

Installation of Warrior USB Key

There are two types of cased hole Warrior tool interface panels at this time. The CPFA and CPFB, the difference between the two panels is the CBL1D card. The CBL1DR4 card does not have a pre filter for the sonic signal. The CBL1DR5 card has a software controlled pre filter for the sonic signal. This pre filter is quite useful for sonic tools with large syncs that keep the baseline from returning to zero before the first arrival.

When the USB key is installed on the USB hub in the interface panel the panel type is written to the key via the Warrior control panel. The Warrior software reads the panel type from the key and makes the proper changes to the software. The panel type then becomes transparent to the operator.

If the panel type is not known, the CBL1D will have to be checked when installing the USB key.

To install the USB key remove the top by removing the six 6-32 pan head screws from the top cover of the interface panel.




Insert USB key into open port on USB HUB.


USB HUB




Open USB PORT

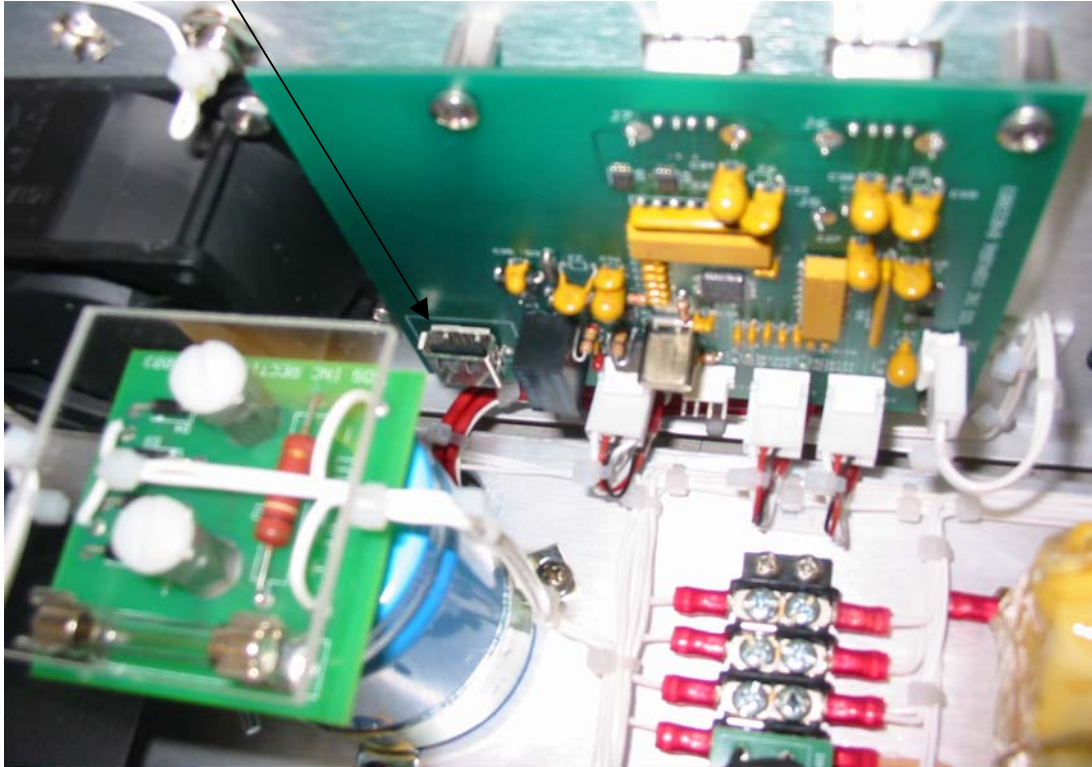

USB KEY

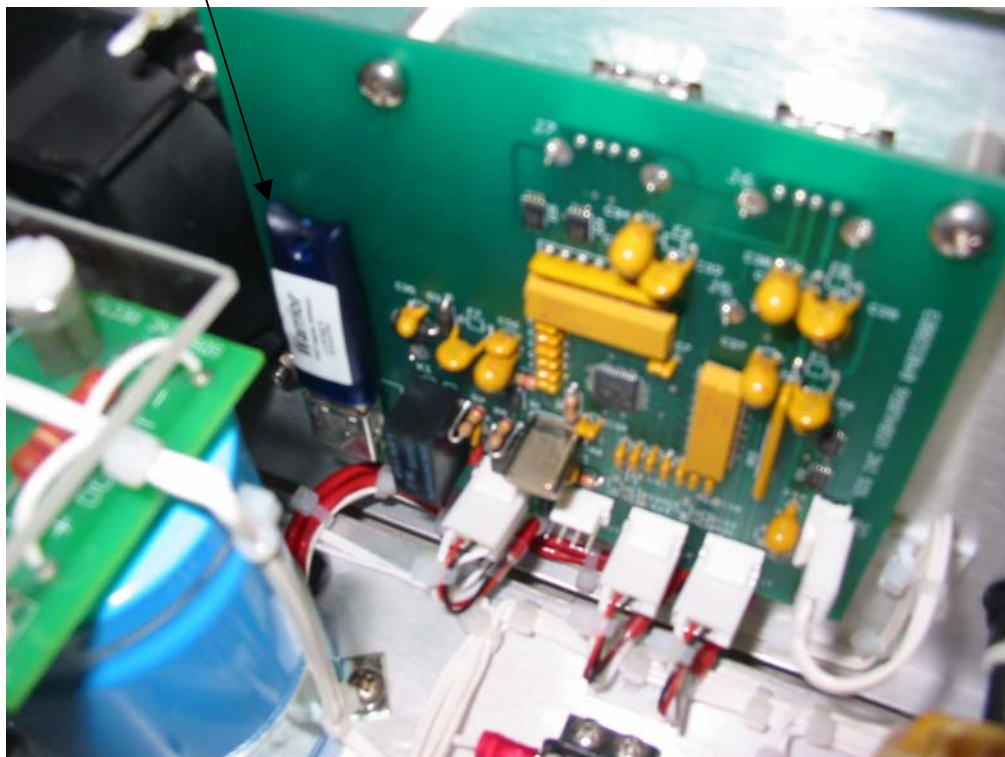

Check panel type by removing card hold down and CBL1D Card.
CBL1DR4 card Panel Type = CPFA
CBL1DR5 card Panel Type = CPFB

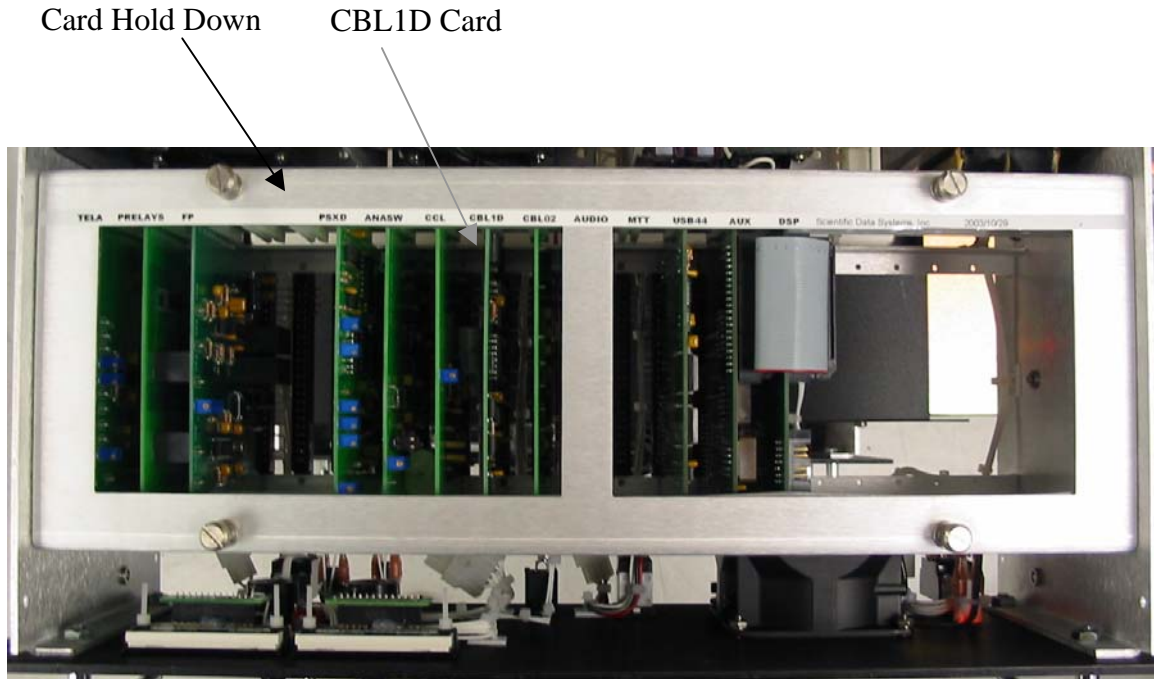

Replace card hold down bracket and top of interface panel.
Open Warrior 'Control Panel' and enter correct panel type and click OK.

